

**AXIAL-FLOW<sup>®</sup> 5130**  
**AXIAL-FLOW<sup>®</sup> 6130**  
**AXIAL-FLOW<sup>®</sup> 7130**

**Combine**

*PIN YDG009296 and above*

## SERVICE MANUAL

Part number 47511959

English

April 2013

Copyright © 2013 CNH America LLC. All Rights Reserved.

**CASE IH**  
AGRICULTURE



## SERVICE MANUAL



<https://caseihservicemanual.com>

AXIAL-FLOW 5130 [YDG009296 - ]  
AXIAL-FLOW 6130 [YDG009296 - ]  
AXIAL-FLOW 7130 [YDG009296 - ]

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.254] Intake and exhaust manifolds and muffler .....	10.3
[10.310] Aftercooler.....	10.4
[10.400] Engine cooling system .....	10.5
[10.414] Fan and drive .....	10.6
[10.418] Rotary screen .....	10.7
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.8
Main gearbox and drive .....	14
[14.100] Main gearbox and drive .....	14.1
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.145] Gearbox internal components.....	21.2
[21.182] Differential.....	21.3
Front axle system .....	25
[25.310] Final drives.....	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.124] Final drive hub, steering knuckles, and shafts .....	27.2
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control .....	29.1
[29.202] Hydrostatic transmission .....	29.2
[29.204] Reservoir, cooler, and lines .....	29.3
[29.218] Pump and motor components.....	29.4

<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.220] Auxiliary hydraulic pump and lines .....	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.322] Regulated/Low pressure system .....	35.6
[35.359] Main control valve .....	35.7
[35.410] Header or attachment height system .....	35.8
[35.440] Grain tank unload system .....	35.9
[35.536] Crop processor system .....	35.10
[35.760] Header reverser drive .....	35.11
[35.796] Chaff spreader control .....	35.12
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.206] Pump .....	41.4
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Cab climate control .....</b>	<b>50</b>
[50.300] Cab pressurizing system .....	50.1
[50.200] Air conditioning.....	50.2
[50.100] Heating .....	50.3
[50.104] Ventilation .....	50.4

<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system .....	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.031] Parking brake electrical system .....	55.4
[55.036] Hydraulic system control .....	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system .....	55.8
[55.202] Cold start aid .....	55.9
[55.301] Alternator .....	55.10
[55.302] Battery.....	55.11
[55.405] External lighting switches and relays .....	55.12
[55.408] Warning indicators, alarms, and instruments .....	55.13
[55.421] Feeding control system .....	55.14
[55.423] Cleaning control system.....	55.15
[55.426] Harvest material flow control system.....	55.16
[55.518] Wiper and washer system.....	55.17
[55.520] Cab harvesting controls.....	55.18
[55.610] Ground speed control .....	55.19
[55.628] Threshing electrical control .....	55.20
[55.640] Electronic modules.....	55.21
[55.661] Cab header controls.....	55.22
[55.662] Header height control .....	55.23
[55.834] Sieve electric control .....	55.24
[55.836] Rotary separator control .....	55.25
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.26
[55.DTC] FAULT CODES.....	55.27
<b>Attachments/Headers</b> .....	<b>58</b>

[58.105] Attachment/Header reel control system.....	58.1
<b>Product feeding .....</b>	<b>60</b>
[60.105] Floating roll, feed chain, and drive .....	60.1
[60.110] Feeder housing.....	60.2
[60.122] Length-of-cut gearbox.....	60.3
[60.150] Feeder drive system .....	60.4
<b>Threshing .....</b>	<b>66</b>
[66.105] Concave.....	66.1
[66.110] Concave control system.....	66.2
[66.260] Threshing mechanism drive system .....	66.3
[66.331] Rotor .....	66.4
<b>Separation .....</b>	<b>72</b>
[72.410] Rotary separator drive system .....	72.1
[72.420] Rotary separator .....	72.2
<b>Residue handling .....</b>	<b>73</b>
[73.210] Straw chopper drive system.....	73.1
[73.230] Straw chopper.....	73.2
[73.335] Chaff spreader .....	73.3
<b>Cleaning .....</b>	<b>74</b>
[74.000] Cleaning.....	74.1
[74.101] Cleaning drive systems .....	74.2
[74.114] Upper shaker shoe .....	74.3
[74.118] Lower shaker shoe .....	74.4
[74.130] Fan housing .....	74.5
[74.140] Tailings return system .....	74.6
<b>Crop storage / Unloading .....</b>	<b>80</b>
[80.101] Clean grain elevator.....	80.1

<https://caseih.servicemanual.com>

[80.150] Grain tank .....	80.2
[80.175] Grain tank unload drive system .....	80.3
[80.180] Grain tank unload .....	80.4
Platform, cab, bodywork, and decals .....	90
[90.105] Machine shields and guards .....	90.1
[90.124] Pneumatically-adjusted operator seat.....	90.2
[90.151] Cab interior.....	90.3

<https://caseihservicemanual.com>



## INTRODUCTION

<https://caseih.servicemanual.com>



# Contents

---

## INTRODUCTION

Basic instructions - Important notice regarding equipment servicing .....	3
Safety rules and signal word definitions .....	4
Personal safety .....	5
Safety rules Ecology and the Environment .....	6
Safety rules - Personal safety .....	7
Safety rules .....	8
Basic instructions - Shop and Assembly .....	9
Torque - Minimum tightening torques for normal assembly .....	11
<small>AXIAL-FLOW 5130 [YDG009296 - ], AXIAL-FLOW 6130 [YDG009296 - ], AXIAL-FLOW 7130 [YDG009296 - ]</small>	
Torque - Standard torque data for hydraulics .....	16
Basic instructions - Chain Wear Tables - Roller Chains .....	18
Dimension .....	20
Frame - Dimension .....	23
Product identification .....	26

<https://caseihservicemanual.com>

---

## **Basic instructions - Important notice regarding equipment servicing**

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The information in this manual is up-to-date at the date of the publication. It is the policy of the manufacturer for continuous improvement. Some information could not be updated due to modifications of a technical or commercial type, or changes to the laws and regulations of different countries.

In case of questions, refer to your CASE IH AGRICULTURE Sales and Service Networks.

<https://caseihservicemanual.com>

---

## Safety rules and signal word definitions

### Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine decals, you will find the signal words Danger, Warning, and Caution followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.



**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1169A



**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170A



**CAUTION**, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. The color associated with Caution is YELLOW.

M1171A

**FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.**

### Machine safety

**NOTICE:** Notice indicates a situation which, if not avoided, could result in machine or property damage. The color associated with Notice is BLUE.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

### Information

**NOTE:** Note indicates additional information which clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

## Personal safety

### **⚠ WARNING**

#### **Moving parts!**

Disengage the Power Take-Off (PTO), turn off the engine, and remove the key. Wait for all movement to stop before leaving the operator's position. Never adjust, lubricate, clean, or unplug machine with the engine running.

Failure to comply could result in death or serious injury.

W0112A

Before you service the machine, put a DO NOT OPERATE tag on the instrument panel.



87358697 1  
**DO NOT OPERATE TAG**

- A. **(1)** Do not remove this tag.
- B. **(2)** See other side.
- C. **(3)** Do not operate.
- D. **(5)** Reason
- E. **(4)** Signed by.

The DO NOT OPERATE tag can be obtained from your CASE IH AGRICULTURE dealer.

---

## Safety rules Ecology and the Environment

Soil, air, and water are vital factors of agriculture and life in general. When legislation does not yet rule the treatment of some of the substances which are required by advanced technology, common sense should govern the use and disposal of products of a chemical and petrochemical nature.

**NOTICE:** *The following are recommendations which may be of assistance:*

- Become acquainted with and ensure that you understand the relative legislation applicable to your country.
- Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, antifreeze, cleaning agents, etc., with regard to their effect on man and nature and how to safely store, use and dispose of these substances.
- Agricultural consultants will, in many cases, be able to help you as well.

### HELPFUL HINTS

- Avoid filling tanks using cans or inappropriate pressurized fuel delivery systems which may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of them contain substances which may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when draining off used engine coolant mixtures, engine, gearbox and hydraulic oils, brake fluids, etc. Do not mix drained brake fluids or fuels with lubricants. Store them safely until they can be disposed of in a proper way to comply with local legislation and available resources.
- Modern coolant mixtures, i.e. antifreeze and other additives, should be replaced every two years. They should not be allowed to get into the soil but should be collected and disposed of properly.
- Do not open the air-conditioning system yourself. It contains gases which should not be released into the atmosphere. Your CASE IH AGRICULTURE dealer or air conditioning specialist has a special extractor for this purpose and will have to recharge the system properly.
- Repair any leaks or defects in the engine cooling or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding as penetrating weld splatter may burn a hole or weaken them, allowing the loss of oils, coolant, etc.

<https://caseinsert.com/>

---

## Safety rules - Personal safety

**Carefully study these precautions, and those included in the external attachment operators manual, and insist that they be followed by those working with and for you.**

1. Thoroughly read and understand this manual and the attachment Operator's Manual before operating this or any other equipment.
2. Be sure all people and pets are clear of the machine before starting. Sound the horn, if equipped, three times before starting engine.
3. Only the operator should be on the machine when in operation. Never allow anyone to climb on to the machine while it is in motion. If the machine is equipped with an Instructors Seat, this must only be used for training purposes. Passengers must not be allowed to use the Instructors Seat.
4. Keep all shields in place. Never work around the machine or any of the attachments while wearing loose clothing that might catch on moving parts.
5. Observe the following precautions whenever lubricating the machine or making adjustments.
  - Disengage all clutching levers or switches.
  - Lower the attachment, if equipped, to the ground or raise the attachment completely and engage the cylinder safety locks. Completing these actions will prevent the attachment from lowering unexpectedly.
  - Engage the parking brake.
  - Shut off the engine and remove the key.
  - Wait for all machine movement to stop before leaving the operators platform.
6. Always keep the machine in gear while travelling downhill.
7. The machine should always be equipped with sufficient front or rear axle weight for safe operation.
8. Under some field conditions, more weight may be required at the front or rear axle for adequate stability. This is especially important when operating in hilly conditions or/when using heavy attachments.
9. Always lower the attachment, shut off the engine, set the parking brake, engage the transmission gears, remove the key and wait for all machine movement to stop before leaving the operators platform.
10. If the attachment or machine should become obstructed or plugged; set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to removing the obstruction or plug.
11. Never disconnect or make any adjustments to the hydraulic system unless the machine and/or the attachment is lowered to the ground or the safety lock(s) is in the engaged position.
12. Use of the flashing lights is highly recommended when operating on a public road.
13. When transporting on a road or highway, use accessory lights and devices for adequate warning to the operators of other vehicles. In this regard, check local government regulations. Various safety lights and devices are available from your CASE IH AGRICULTURE dealer.
14. Practice safety 365 days a year.
15. Keep all your equipment in safe operating condition.
16. Keep all guards and safety devices in place.
17. Always set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to service the machine and attachment.
18. Remember: A careful operator is the best insurance against an accident.
19. Extreme care should be taken in keeping hands and clothing away from moving parts.

## Safety rules

All repair and maintenance works listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given; and using, whenever possible, the special tools.

Anyone who carries out the above operations without complying with the procedures shall be responsible for the subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages due to the anomalous behavior of parts and/or components not approved by the manufacturer himself, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages due to an anomalous behavior of parts and/or components not approved by the manufacturer.

The information in this manual is up-to-date at the date of the publication. It is the policy of the manufacturer for continuous improvement. Some information could not be updated due to modifications of a technical or commercial type, as well as to suit the laws and regulations of different countries.

In case of questions, refer to your Sales and Service Networks.

<https://caseihservicemanual.com>

---

## Basic instructions - Shop and Assembly

### SHIMMING

For each adjustment operation, select adjusting shims and measure individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value indicated on each shim.

### ROTATING SHAFT SEALS

For correct rotating shaft seal installation, proceed as follows:

- before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes.
- thoroughly clean the shaft and check that the working surface on the shaft is not damaged.
- position the sealing lip facing the fluid; with hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will deviate the fluid towards the inner side of the seal.
- coat the sealing lip with a thin layer of lubricant (use oil rather than grease) and fill the gap between the sealing lip and the dust lip on double lip seals with grease.
- insert the seal in its seat and press down using a flat punch or seal installation tool. Do not tap the seal with a hammer or mallet.
- whilst inserting the seal, check that it is perpendicular to the seat; once settled, make sure that it makes contact with the thrust element, if required.
- to prevent damaging the seal lip on the shaft, position a protective guard during installation operations.

### O-RING SEALS

Lubricate the O-RING seals before inserting them in the seats, this will prevent them from overturning and twisting, which would jeopardise sealing efficiency.

### SEALING COMPOUNDS

Apply one of the following sealing compounds on the mating surfaces when specified: SILMATE® RTV1473, or **LOCTITE® RTV 598** or **LOCTITE® INSTANT GASKET 587 BLUE**. Before applying the sealing compound, prepare the surfaces as directed on product container as follows:

- remove any incrustations using a metal brush.
- thoroughly de-grease the surfaces using a locally approved cleaning agent such as safety solvent or brake parts cleaner.

### SPARE PARTS

Only use "CNH Original Parts" or "CASE IH AGRICULTURE Parts".

Only genuine spare parts guarantee the same quality, duration and safety as original parts, as they are the same parts that are assembled during standard production. Only "CNH Original Parts" or "CASE IH AGRICULTURE Parts" can offer this guarantee.

When ordering spare parts, always provide the following information:

- machine model (commercial name) and serial number
- part number of the ordered part, which can be found in the "Microfiches" or the "Service Parts Catalogue", used for order processing



---

## PROTECTING THE ELECTRONIC/ ELECTRICAL SYSTEMS DURING CHARGING OR WELDING

To avoid damage to the electronic/electrical systems, always observe the following:

1. Never make or break any of the charging circuit connections, including the battery connections, when the engine is running.
2. Never short any of the charging components to ground.
3. Always disconnect the ground cable from the battery before arc welding on the combine or on any header attached to the combine.
  - position the welder ground clamp as close to the welding area as possible
  - if welding in close proximity to a computer module, then the module should be removed from the combine
  - never allow welding cables to lay on, near or across any electrical wiring or electronic component while welding is in progress
4. Always disconnect the negative cable from the battery when charging the battery in the combine with a battery charger.

**NOTICE:** If welding must be performed on the unit, either the combine or the header (if it is attached), the battery ground cable must be disconnected from the combine battery. The electronic monitoring system and charging system will be damaged if this is not done.

Remove the battery ground cable. Reconnect the cable when welding is completed.



### WARNING



**Battery acid causes severe burns. Batteries contain sulfuric acid. Avoid contact with skin, eyes or clothing. Antidote - EXTERNAL: flush with water. INTERNAL: drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetables oil. Call physician immediately. EYES: flush with water for 15 minutes and get prompt medical attention.**

84-110

## TOOLS

The tools that CASE IH AGRICULTURE suggests and illustrate in this manual have been:

- specifically researched and designed for use with CASE IH AGRICULTURE machines
- essential for reliable repair operations
- accurately built and rigorously tested so as to offer efficient and long-lasting operation

By using these tools, repair personnel will benefit from:

- operating in optimal technical conditions
- obtaining the best results
- saving time and effort
- working in safe conditions

**NOTE:** The terms "front", "rear", "right-hand" and "left-hand" (when referred to different parts) are determined from the rear, facing in the direction of travel of the machine during operation.

## Torque - Minimum tightening torques for normal assembly

AXIAL-FLOW 5130 [YDG009296 - ], AXIAL-FLOW 6130 [YDG009296 - ], AXIAL-FLOW 7130 [YDG009296 - ]

### METRIC NON-FLANGED HARDWARE

NOM. SIZE	CLASS 8.8 BOLT and CLASS 8 NUT		CLASS 10.9 BOLT and CLASS 10 NUT		LOCKNUT CL.8 W/CL8.8 BOLT	LOCKNUT CL.10 W/CL10.9 BOLT
	UNPLATED	PLATED W/ZnCr	UNPLATED	PLATED W/ZnCr		
M4	2.2 N·m (19 lb in)	2.9 N·m (26 lb in)	3.2 N·m (28 lb in)	4.2 N·m (37 lb in)	2 N·m (18 lb in)	2.9 N·m (26 lb in)
M5	4.5 N·m (40 lb in)	5.9 N·m (52 lb in)	6.4 N·m (57 lb in)	8.5 N·m (75 lb in)	4 N·m (36 lb in)	5.8 N·m (51 lb in)
M6	7.5 N·m (66 lb in)	10 N·m (89 lb in)	11 N·m (96 lb in)	15 N·m (128 lb in)	6.8 N·m (60 lb in)	10 N·m (89 lb in)
M8	18 N·m (163 lb in)	25 N·m (217 lb in)	26 N·m (234 lb in)	35 N·m (311 lb in)	17 N·m (151 lb in)	24 N·m (212 lb in)
M10	37 N·m (27 lb ft)	49 N·m (36 lb ft)	52 N·m (38 lb ft)	70 N·m (51 lb ft)	33 N·m (25 lb ft)	48 N·m (35 lb ft)
M12	64 N·m (47 lb ft)	85 N·m (63 lb ft)	91 N·m (67 lb ft)	121 N·m (90 lb ft)	58 N·m (43 lb ft)	83 N·m (61 lb ft)
M16	158 N·m (116 lb ft)	210 N·m (155 lb ft)	225 N·m (166 lb ft)	301 N·m (222 lb ft)	143 N·m (106 lb ft)	205 N·m (151 lb ft)
M20	319 N·m (235 lb ft)	425 N·m (313 lb ft)	440 N·m (325 lb ft)	587 N·m (433 lb ft)	290 N·m (214 lb ft)	400 N·m (295 lb ft)
M24	551 N·m (410 lb ft)	735 N·m (500 lb ft)	762 N·m (560 lb ft)	1016 N·m (750 lb ft)	501 N·m (370 lb ft)	693 N·m (510 lb ft)


**NOTE:** M4 through M8 hardware torque specifications are shown in pound-inches. M10 through M24 hardware torque specifications are shown in pound-feet.

**METRIC FLANGED HARDWARE**

NOM. SIZE	CLASS 8.8 BOLT and CLASS 8 NUT		CLASS 10.9 BOLT and CLASS 10 NUT		LOCKNUT CL.8 W/CL8.8 BOLT	LOCKNUT CL.10 W/CL10.9 BOLT
	UNPLATED	PLATED W/ZnCr	UNPLATED	PLATED W/ZnCr		
M4	2.4 N·m (21 lb in)	3.2 N·m (28 lb in)	3.5 N·m (31 lb in)	4.6 N·m (41 lb in)	2.2 N·m (19 lb in)	3.1 N·m (27 lb in)
M5	4.9 N·m (43 lb in)	6.5 N·m (58 lb in)	7.0 N·m (62 lb in)	9.4 N·m (83 lb in)	4.4 N·m (39 lb in)	6.4 N·m (57 lb in)
M6	8.3 N·m (73 lb in)	11 N·m (96 lb in)	12 N·m (105 lb in)	16 N·m (141 lb in)	7.5 N·m (66 lb in)	11 N·m (96 lb in)
M8	20 N·m (179 lb in)	27 N·m (240 lb in)	29 N·m (257 lb in)	39 N·m (343 lb in)	18 N·m (163 lb in)	27 N·m (240 lb in)
M10	40 N·m (30 lb ft)	54 N·m (40 lb ft)	57 N·m (42 lb ft)	77 N·m (56 lb ft)	37 N·m (27 lb ft)	53 N·m (39 lb ft)
M12	70 N·m (52 lb ft)	93 N·m (69 lb ft)	100 N·m (74 lb ft)	134 N·m (98 lb ft)	63 N·m (47 lb ft)	91 N·m (67 lb ft)
M16	174 N·m (128 lb ft)	231 N·m (171 lb ft)	248 N·m (183 lb ft)	331 N·m (244 lb ft)	158 N·m (116 lb ft)	226 N·m (167 lb ft)
M20	350 N·m (259 lb ft)	467 N·m (345 lb ft)	484 N·m (357 lb ft)	645 N·m (476 lb ft)	318 N·m (235 lb ft)	440 N·m (325 lb ft)
M24	607 N·m (447 lb ft)	809 N·m (597 lb ft)	838 N·m (618 lb ft)	1118 N·m (824 lb ft)	552 N·m (407 lb ft)	

**IDENTIFICATION**


**Metric Hex head and carriage bolts, classes 5.6 and up**

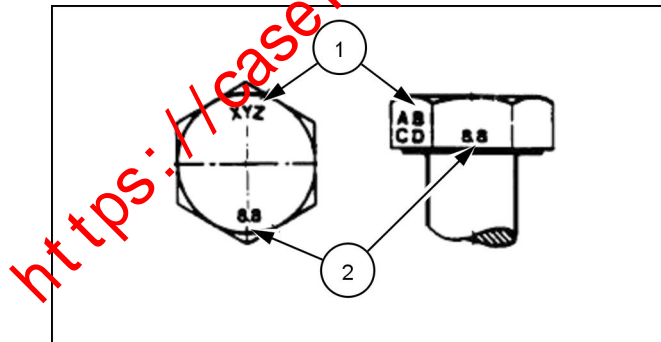

20083680 1

1. Manufacturer's Identification
2. Property Class

**Metric Hex nuts and locknuts, classes 05 and up**

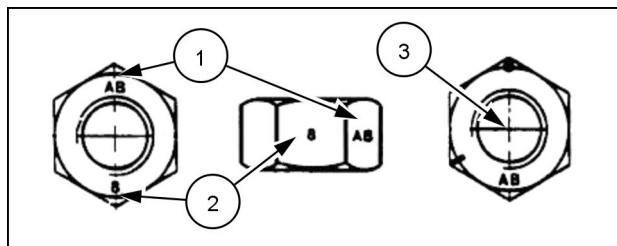

20083681 2

1. Manufacturer's Identification
2. Property Class
3. Clock Marking of Property Class and Manufacturer's Identification (Optional), i.e. marks **60** ° apart indicate Class 10 properties, and marks **120** ° apart indicate Class 8.

**INCH NON-FLANGED HARDWARE**

NOMINAL SIZE	SAE GRADE 5 BOLT and NUT		SAE GRADE 8 BOLT and NUT		LOCKNUT GrB W/ Gr5 BOLT	LOCKNUT GrC W/ Gr8 BOLT
	UN-PLATED or PLATED SILVER	PLATED W/ZnCr GOLD	UN-PLATED or PLATED SILVER	PLATED W/ZnCr GOLD		
1/4	8 N·m (71 lb in)	11 N·m (97 lb in)	12 N·m (106 lb in)	16 N·m (142 lb in)	8.5 N·m (75 lb in)	12.2 N·m (109 lb in)
5/16	17 N·m (150 lb in)	23 N·m (204 lb in)	24 N·m (212 lb in)	32 N·m (283 lb in)	17.5 N·m (155 lb in)	25 N·m (220 lb in)
3/8	30 N·m (22 lb ft)	40 N·m (30 lb ft)	43 N·m (31 lb ft)	57 N·m (42 lb ft)	31 N·m (23 lb ft)	44 N·m (33 lb ft)
7/16	48 N·m (36 lb ft)	65 N·m (48 lb ft)	68 N·m (50 lb ft)	91 N·m (67 lb ft)	50 N·m (37 lb ft)	71 N·m (53 lb ft)
1/2	74 N·m (54 lb ft)	98 N·m (73 lb ft)	104 N·m (77 lb ft)	139 N·m (103 lb ft)	76 N·m (56 lb ft)	108 N·m (80 lb ft)
9/16	107 N·m (79 lb ft)	142 N·m (105 lb ft)	150 N·m (111 lb ft)	201 N·m (148 lb ft)	111 N·m (82 lb ft)	156 N·m (115 lb ft)
5/8	147 N·m (108 lb ft)	196 N·m (145 lb ft)	208 N·m (153 lb ft)	277 N·m (204 lb ft)	153 N·m (113 lb ft)	215 N·m (159 lb ft)
3/4	261 N·m (193 lb ft)	348 N·m (257 lb ft)	369 N·m (272 lb ft)	491 N·m (362 lb ft)	271 N·m (200 lb ft)	383 N·m (282 lb ft)
7/8	420 N·m (310 lb ft)	561 N·m (413 lb ft)	594 N·m (438 lb ft)	791 N·m (584 lb ft)	437 N·m (323 lb ft)	617 N·m (455 lb ft)
1	630 N·m (465 lb ft)	841 N·m (620 lb ft)	890 N·m (656 lb ft)	1187 N·m (875 lb ft)	654 N·m (483 lb ft)	924 N·m (681 lb ft)


**NOTE:** For Imperial Units, 1/4 in and 5/16 in hardware torque specifications are shown in pound-inches. 3/8 in through 1 in hardware torque specifications are shown in pound-feet.

**INCH FLANGED HARDWARE**

NOM- INAL SIZE	SAE GRADE 5 BOLT and NUT		SAE GRADE 8 BOLT and NUT		LOCKNUT GrF W/ Gr5 BOLT	LOCKNUT GrG W/ Gr8 BOLT
	UNPLATED or PLATED SILVER	PLATED W/ZnCr GOLD	UNPLATED or PLATED SILVER	PLATED W/ZnCr GOLD		
1/4	9 N·m (80 lb in)	12 N·m (106 lb in)	13 N·m (115 lb in)	17 N·m (150 lb in)	8 N·m (71 lb in)	12 N·m (106 lb in)
5/16	19 N·m (168 lb in)	25 N·m (221 lb in)	26 N·m (230 lb in)	35 N·m (310 lb in)	17 N·m (150 lb in)	24 N·m (212 lb in)
3/8	33 N·m (25 lb ft)	44 N·m (33 lb ft)	47 N·m (35 lb ft)	63 N·m (46 lb ft)	30 N·m (22 lb ft)	43 N·m (32 lb ft)
7/16	53 N·m (39 lb ft)	71 N·m (52 lb ft)	75 N·m (55 lb ft)	100 N·m (74 lb ft)	48 N·m (35 lb ft)	68 N·m (50 lb ft)
1/2	81 N·m (60 lb ft)	108 N·m (80 lb ft)	115 N·m (85 lb ft)	153 N·m (113 lb ft)	74 N·m (55 lb ft)	104 N·m (77 lb ft)
9/16	117 N·m (86 lb ft)	156 N·m (115 lb ft)	165 N·m (122 lb ft)	221 N·m (163 lb ft)	106 N·m (78 lb ft)	157 N·m (116 lb ft)
5/8	162 N·m (119 lb ft)	216 N·m (159 lb ft)	228 N·m (168 lb ft)	304 N·m (225 lb ft)	147 N·m (108 lb ft)	207 N·m (153 lb ft)
3/4	287 N·m (212 lb ft)	383 N·m (282 lb ft)	405 N·m (299 lb ft)	541 N·m (399 lb ft)	261 N·m (193 lb ft)	369 N·m (272 lb ft)
7/8	462 N·m (341 lb ft)	617 N·m (455 lb ft)	653 N·m (482 lb ft)	871 N·m (642 lb ft)	421 N·m (311 lb ft)	594 N·m (438 lb ft)
1	693 N·m (512 lb ft)	925 N·m (682 lb ft)	979 N·m (722 lb ft)	1305 N·m (963 lb ft)	631 N·m (465 lb ft)	890 N·m (656 lb ft)

**IDENTIFICATION**

**Inch Bolts and free-spinning nuts**

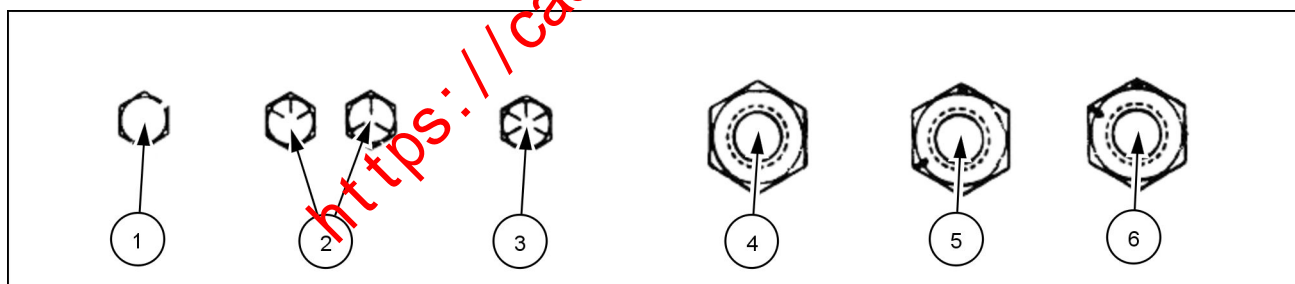


20083682 3

**Grade Marking Examples**

SAE Grade Identification			
1	Grade 2 - No Marks	4	Grade 2 Nut - No Marks
2	Grade 5 - Three Marks	5	Grade 5 Nut - Marks 120 ° Apart
3	Grade 8 - Five Marks	6	Grade 8 Nut - Marks 60 ° Apart

**Inch Lock Nuts, All Metal (Three optional methods)**

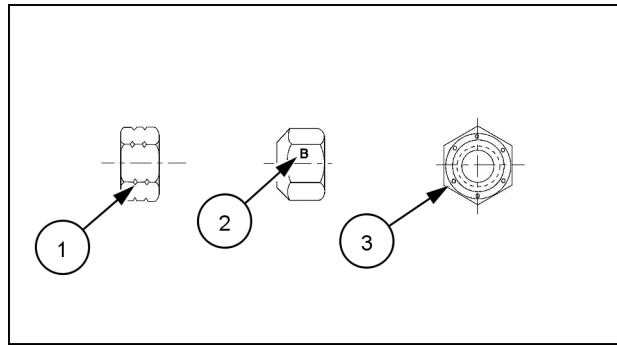

20090268 4

**Grade Identification**


Grade	Corner Marking Method (1)	Flats Marking Method (2)	Clock Marking Method (3)
Grade A	No Notches	No Mark	No Marks
Grade B	One Circumferential Notch	Letter B	Three Marks
Grade C	Two Circumferential Notches	Letter C	Six Marks

<https://caseihservicemanual.com>

## Torque - Standard torque data for hydraulics

### INSTALLATION OF ADJUSTABLE FITTINGS IN STRAIGHT THREAD O RING BOSSES

1. Lubricate the O-ring by coating it with a light oil or petroleum. Install the O-ring in the groove adjacent to the metal backup washer which is assembled at the extreme end of the groove (4).
2. Install the fitting into the SAE straight thread boss until the metal backup washer contacts the face of the boss (5).

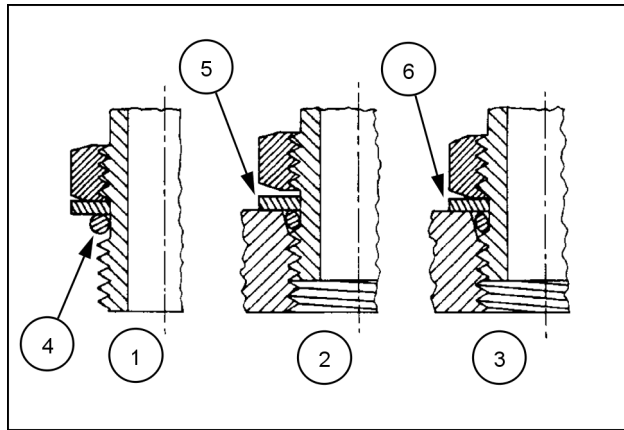

23085659 1

- NOTE:** Do not over tighten and distort the metal backup washer.
3. Position the fitting by turning out (counterclockwise) up to a maximum of one turn. Holding the pad of the fitting with a wrench, tighten the locknut and washer against the face of the boss (6).

### STANDARD TORQUE DATA FOR HYDRAULIC TUBES AND FITTINGS

TUBE NUTS FOR 37° FLARED FITTINGS				O-RING BOSS PLUGS ADJUSTABLE FITTING LOCKNUTS, SWIVEL JIC- 37° SEATS
SIZE	TUBING OD	THREAD SIZE	TORQUE	TORQUE
4	6.4 mm (1/4 in)	7/16-20	12 - 16 N·m (9 - 12 lb ft)	8 - 14 N·m (6 - 10 lb ft)
5	7.9 mm (5/16 in)	1/2-20	16 - 20 N·m (12 - 15 lb ft)	14 - 20 N·m (10 - 15 lb ft)
6	9.5 mm (3/8 in)	9/16-18	20 - 33 N·m (21 - 24 lb ft)	20 - 27 N·m (15 - 20 lb ft)
8	12.7 mm (1/2 in)	3/4-16	27 - 54 N·m (35 - 40 lb ft)	34 - 41 N·m (25 - 30 lb ft)
10	15.9 mm (5/8 in)	7/8-14	72 - 79 N·m (53 - 58 lb ft)	47 - 54 N·m (35 - 40 lb ft)
12	19.1 mm (3/4 in)	1-1/16-12	104 - 111 N·m (77 - 82 lb ft)	81 - 95 N·m (60 - 70 lb ft)
14	22.2 mm (7/8 in)	1-3/16-12	122 - 136 N·m (90 - 100 lb ft)	95 - 109 N·m (70 - 80 lb ft)
16	25.4 mm (1 in)	1-5/8-12	149 - 163 N·m (110 - 120 lb ft)	108 - 122 N·m (80 - 90 lb ft)
20	31.8 mm (1-1/4 in)	1-5/8-12	190 - 204 N·m (140 - 150 lb ft)	129 - 158 N·m (95 - 115 lb ft)
24	38.1 mm (1-1/2 in)	1-7/8-12	217 - 237 N·m (160 - 175 lb ft)	163 - 190 N·m (120 - 140 lb ft)
32	50.8 mm (2 in)	2-1/2-12	305 - 325 N·m (225 - 240 lb ft)	339 - 407 N·m (250 - 300 lb ft)

These torques are not recommended for tubes of 12.7 mm (1/2 in) OD and larger with wall thickness of 0.889 mm (0.035 in) or less. The torque is specified for 0.889 mm (0.035 in) wall tubes on each application individually.

Before installing and torquing 37 ° flared fittings, clean the face of the flare and threads with a clean solvent or Loctite cleaner and apply hydraulic sealant **LOCTITE® 569** to the 37 ° flare and the threads.

Install fitting and torque to specified torque, loosen fitting and retorque to specifications.

### PIPE THREAD FITTING TORQUE

Before installing and tightening pipe fittings, clean the threads with a clean solvent or Loctite cleaner and apply sealant **LOCTITE® 567 PST PIPE SEALANT** for all fittings including stainless steel or **LOCTITE® 565 PST** for most metal fittings. For high filtration/zero contamination systems use **LOCTITE® 545**.

PIPE THREAD FITTING	
Thread Size	Torque (Maximum)
1/8-27	13 N·m (10 lb ft)
1/4-18	16 N·m (12 lb ft)
3/8-18	22 N·m (16 lb ft)
1/2-14	41 N·m (30 lb ft)
3/4-14	54 N·m (40 lb ft)


### INSTALLATION OF ORFS (O-RING FLAT FACED) FITTINGS

When installing ORFS fittings thoroughly clean both flat surfaces of the fittings **(1)** and lubricate the O-ring **(2)** with light oil. Make sure both surfaces are aligned properly. Torque the fitting to specified torque listed throughout the repair manual.

**NOTICE:** If the fitting surfaces are not properly cleaned, the O-ring will not seal properly. If the fitting surfaces are not properly aligned, the fittings may be damaged and will not seal properly.

**NOTICE:** Always use genuine factory replacement oils and filters to ensure proper lubrication and filtration of engine and hydraulic system oils.

The use of proper oils, grease, and keeping the hydraulic system clean will extend machine and component life.

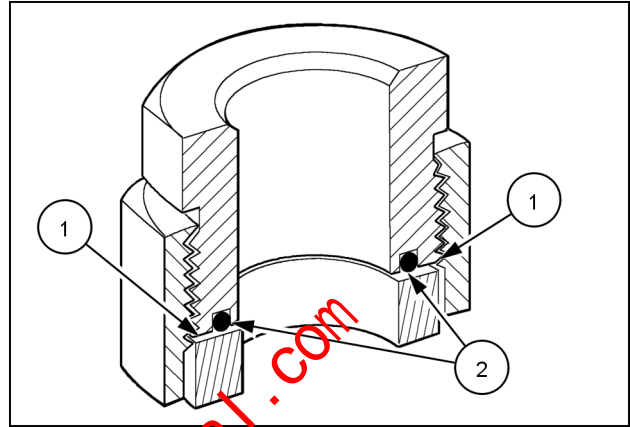

50011183 2

<https://caseihservicemanual.com>




## Basic instructions - Chain Wear Tables - Roller Chains

### Chain wear

The individual joints in a roller chain articulate as they enter and leave the sprockets. This articulation results in wear on the pins and bushings. Material that is worn away from these surfaces will cause the chain to gradually elongate. Chains do not stretch. Material is worn from pin and bushing.

Critical dimensions of the chain are as follows:

- (1) 2X pitch
- (2) Wear plus 2X pitch
- (3) Elongation due to pin and bushing wear

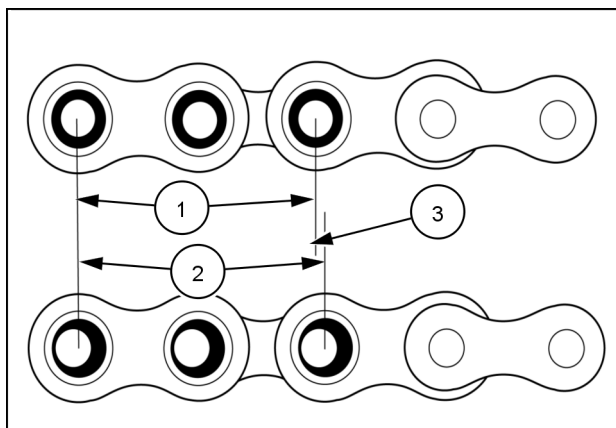


96091478

Elongation is normal and may be minimized by proper lubrication and drive maintenance. The rate of wear is dependent upon: the relationship between the load and the amount of bearing area between pin and bushing, the material and surface condition of the bearing surfaces, the adequacy of lubrication, and the frequency and degree of articulation between pins and bushings. The latter is determined by the quantity of sprockets in the drive, their speeds, the number of teeth and the length of the chain in pitches.

An accurate wear measurement (1) can be made by using the above illustration. Measure as closely as possible from the center of one pin to the center of another. The more pitches (pins) contained within the measurement, increase the accuracy. If the measured value exceeds the nominal by more than the allowable percentage the chain should be replaced. The maximum allowable wear elongation is approximately 3 % for most industrial applications, based upon sprocket design. The allowable chain wear in percent can be calculated using the relationship:  $200/(N)$ , where (N) is the number of teeth in the large sprocket. This relationship is often useful since the normal maximum allowable chain wear elongation of 3 % is valid only up to 67 teeth in the large sprocket. In drives having fixed center distances, chains running in parallel or where smoother operation is required, wear should be limited to approximately 1.5 %.

For example, if 12 pitches (12 pins) of a #80 chain were measured and the result was 313.944 mm (12.360 in) or greater (using 3 % as the maximum allowable wear), the chain should be replaced. Anything less than 313.944 mm (12.360 in) would still be acceptable by most industrial standards.

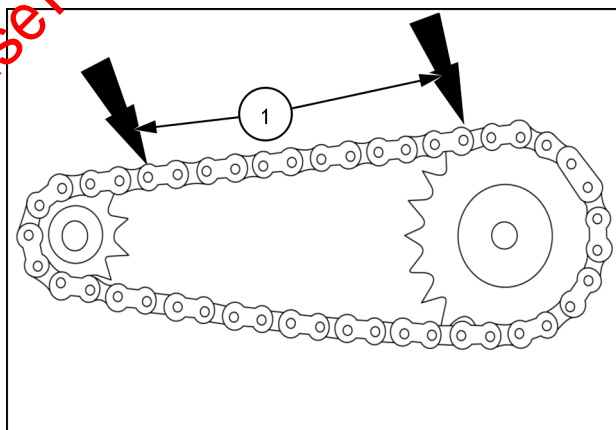

96091469 2

**WEAR LIMITS ON ROLLER CHAIN**


Strand Length in Pitches	No. 40 Chain (08A)		No. 50 Chain (10A)		No. 60 Chain (12A)		No. 80 Chain (16A)	
	New	Replace	New	Replace	New	Replace	New	Replace
40P	508 mm (20.0 in)	523 mm (20.591 in)	635 mm (25.0 in)	654 mm (25.748 in)	762 mm (30.0 in)	787 mm (31.0 in)	1016 mm (40.0 in)	1047 mm (41.220 in)
50P	635 mm (25.0 in)	654 mm (25.748 in)	793 mm (31.220 in)	817 mm (32.165 in)	952 mm (37.480 in)	981 mm (38.622 in)	1270 mm (50.0 in)	1308 mm (51.496 in)
60P	762 mm (30.0 in)	784 mm (30.866 in)	952 mm (37.480 in)	981 mm (38.622 in)	1143 mm (45.0 in)	1177 mm (46.339 in)	1524 mm (60.0 in)	1568 mm (61.732 in)
70P	889 mm (35.0 in)	914 mm (36.0 in)	1111 mm (43.740 in)	1144 mm (45.039 in)	1333 mm (52.480 in)	1371 mm (54.0 in)	1778 mm (70.0 in)	1828 mm (72.0 in)
80P	1016 mm (40.0 in)	1047 mm (41.220 in)	1270 mm (50.0 in)	1308 mm (51.496 in)	1524 mm (60.0 in)	1568 mm (61.732 in)	2032 mm (80.0 in)	2095 mm (82.480 in)
90P	1143 mm (45.0 in)	1177 mm (46.339 in)	1428 mm (56.220 in)	1473 mm (58.0 in)	1714 mm (67.480 in)	1765 mm (69.488 in)	2286 mm (90.0 in)	2355 mm (92.717 in)
100P	1270 mm (50.0 in)	1308 mm (51.496 in)	1578 mm (62.126 in)	1635 mm (64.370 in)	1905 mm (75.0 in)	1962 mm (77.244 in)	2540 mm (100.0 in)	2616 mm (103.0 in)

**STANDARD ROLLER CHAIN SIZES - NEW CHAINS**

Chain No.	150 Chain No.	Pitch	Width	Roller Diameter
40	08A	12.7 mm (0.5 in)	7.9 mm (0.311 in)	7.9 mm (0.311 in)
50	10A	15.8 mm (0.622 in)	9.5 mm (0.374 in)	10.1 mm (0.398 in)
60	12A	19 mm (0.748 in)	12.7 mm (0.500 in)	11.9 mm (0.469 in)
80	16A	25.4 mm (1.000 in)	15.8 mm (0.622 in)	15.8 mm (0.622 in)
100	20A	31.7 mm (1.248 in)	19 mm (0.748 in)	19 mm (0.748 in)
120	24A	38.1 mm (1.500 in)	25.4 mm (1.000 in)	22.2 mm (0.874 in)
140	28A	44.4 mm (1.748 in)	25.4 mm (1.000 in)	25.4 mm (1.000 in)
160	32A	50.8 mm (2.000 in)	31.7 mm (1.248 in)	28.5 mm (1.122 in)
180	*	57.1 mm (2.248 in)	35.7 mm (1.406 in)	35.7 mm (1.406 in)
200	40A	63.4 mm (2.496 in)	38.1 mm (1.500 in)	39.6 mm (1.559 in)

\* No. 150 Number does not exist.

## Dimension

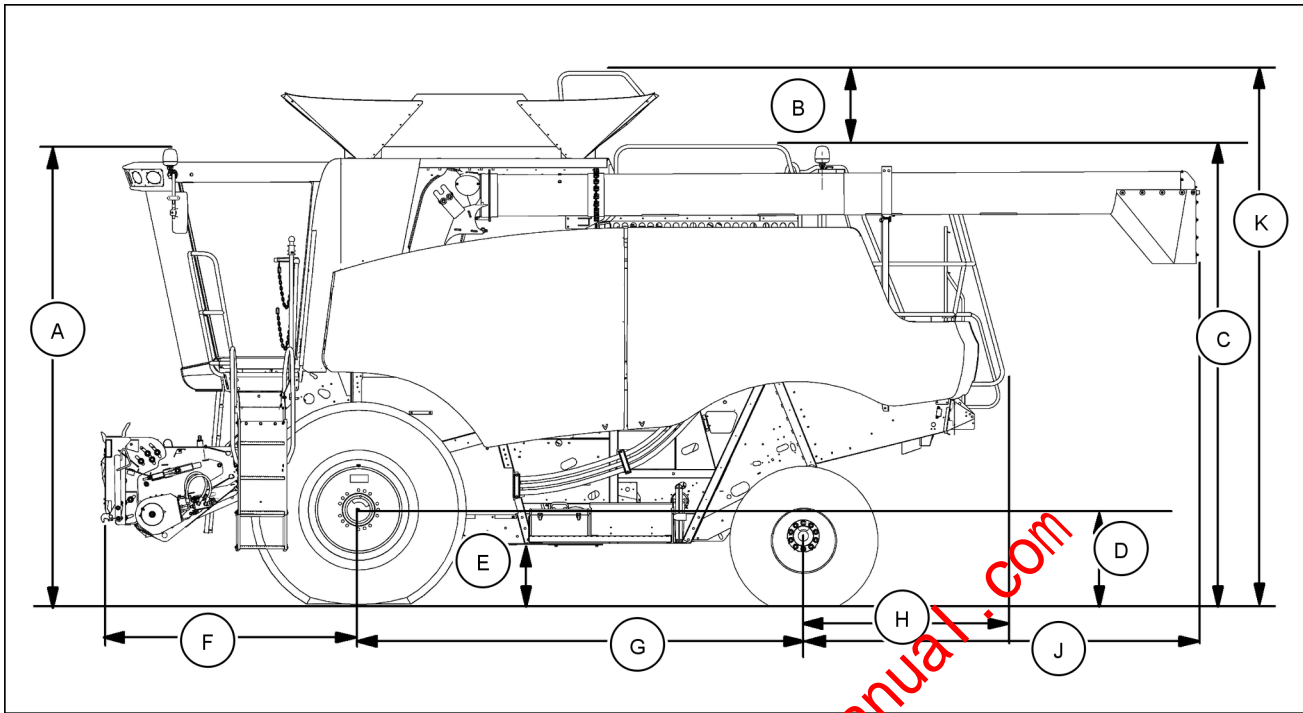


RH08F009 B 1

(A) Refer to chart on the next page	(E) Refer to chart on the next page
(B) 1.092 m (43 in)	(F) With rock trap- 2.311 m (91 in) Without rock trap- 2.192 m (86.3 in)
(C) Refer to chart on the next page	(G) Wheelbase - 3.815 m (150.2 in)
(D) Refer to chart on the next page	(H) 1.682 m (66.2 in)

**NOTE:** These dimensions are with the feeder raised.

<https://caseihetrainingmanual.com>

INTRODUCTION

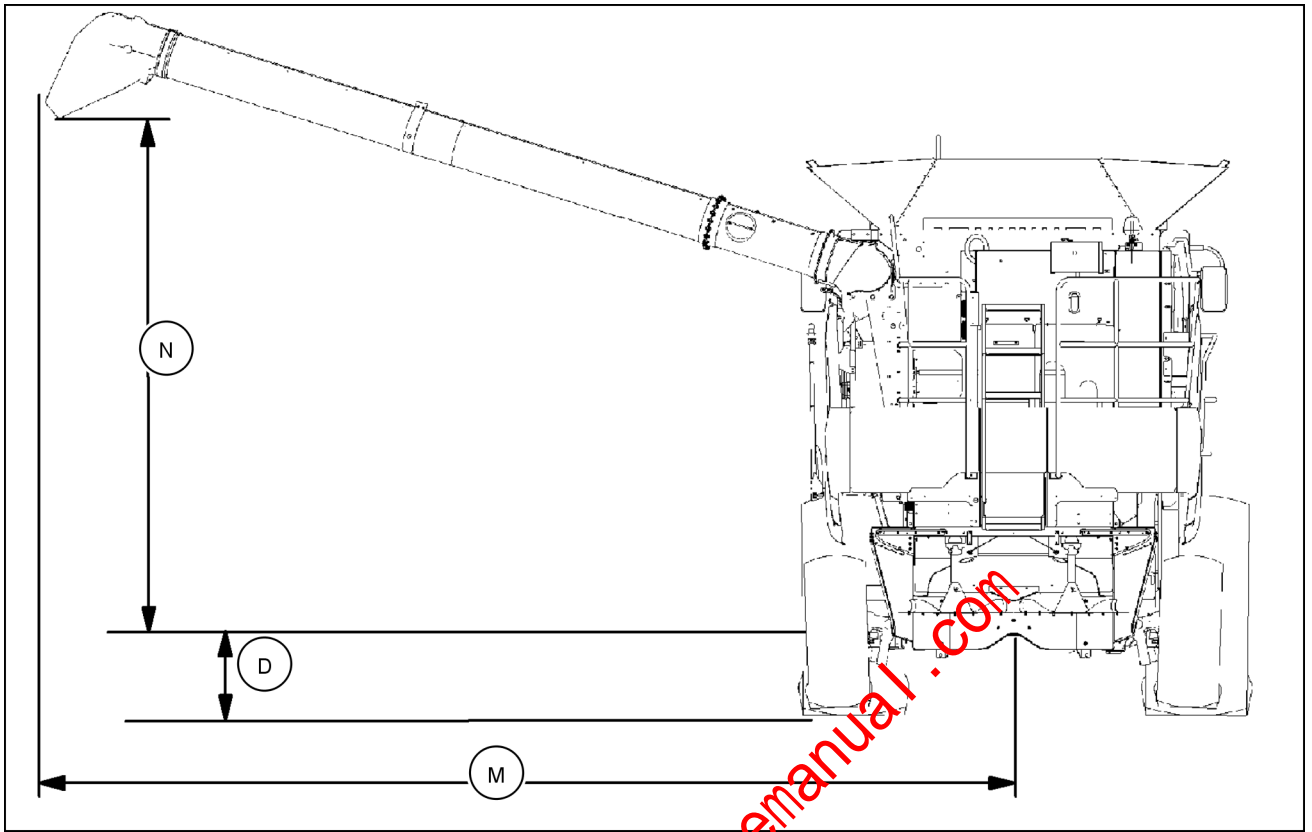

RH09E183A 2

Tire size	A	C	D	E	K
30.5L-R32 R1	3914 mm (154 in)	3658 mm (144 in)	800 mm (32 in)	457 mm (18 in)	4749 mm (187 in)
800/65R32 R1W	3958 mm (156 in)	3671 mm (145 in)	826 mm (33 in)	492 mm (19 in)	4763 mm (188 in)
900/60 R32 R1W	3980 mm (157 in)	3693 mm (145 in)	848 mm (33 in)	514 mm (20 in)	4785 mm (188 in)
900/65 R32 R2	4011 mm (158 in)	3747 mm (148 in)	902 mm (36 in)	568 mm (22 in)	4839 mm (191 in)
800/70R38 R1W	4041 mm (159 in)	3760 mm (148 in)	914 mm (36 in)	580 mm (23 in)	4852 mm (191 in)
76x50.0 - 32 HF3	4044 mm (159 in)	3762 mm (148 in)	917 mm (36 in)	583 mm (23 in)	4854 mm (191 in)
480/80R42 (18.4-R42) R1 R1W	3980 mm (157 in)	3691 mm (145 in)	846 mm (33 in)	512 mm (20 in)	4783 mm (188 in)
520/85R38 R1	3953 mm (156 in)	3668 mm (144 in)	823 mm (32 in)	489 mm (19 in)	4760 mm (187 in)
520/85R42 R1, R1W	4024 mm (158 in)	3736 mm (147 in)	891 mm (35 in)	557 mm (22 in)	4828 mm (190 in)
520/85R42 R2 Duals	4042 mm (159 in)	3759 mm (148 in)	914 mm (36 in)	580 mm (23 in)	4851 mm (191 in)
620/70R42 R1W	4009 mm (158 in)	3723 mm (147 in)	878 mm (35 in)	544 mm (21 in)	4815 mm (190 in)

INTRODUCTION

Dimension	21 ft Unloader tube	24 ft Unloader tube	Add to Dimension "D"	Top of Grain Tank Extension (K)	Top of AFS Antenna	Top of Front Beacon (J)
J	2604 mm (103 in)	3524 mm (139 in)				
Unloader tube fully extended 102 °						
M	6588 mm (259 in)	7455 mm (294 in)	Grain Tank Covers Up	3818 mm (150 in)	3691 mm (145 in)	3089 mm (122 in)
N	3501 mm (138 in)	3763 mm (148 in)	Grain Tank Covers Closed	3080 mm (121 in)	NA	NA
			Grain Tank Extensions Up	3576 mm (141 in)	3691 mm (145 in)	226 mm (9 in)

**NOTE:** These dimensions are with the feeder lowered.

**NOTICE:** Verify dimensions before transporting machine.

**Steering**


To combine centerline (non-power guide axle) 4450 mm (175 in)

Approximate shipping weights	
AXIAL-FLOW®-7130	17050 kg (37589 lb)
AXIAL-FLOW®-6130	16350 kg (36046 lb)
AXIAL-FLOW®-5130	15450 kg (34061 lb)

**NOTE:** Weight is based on a typically equipped combine.

https://caseih.servicemanual.com

## Frame - Dimension

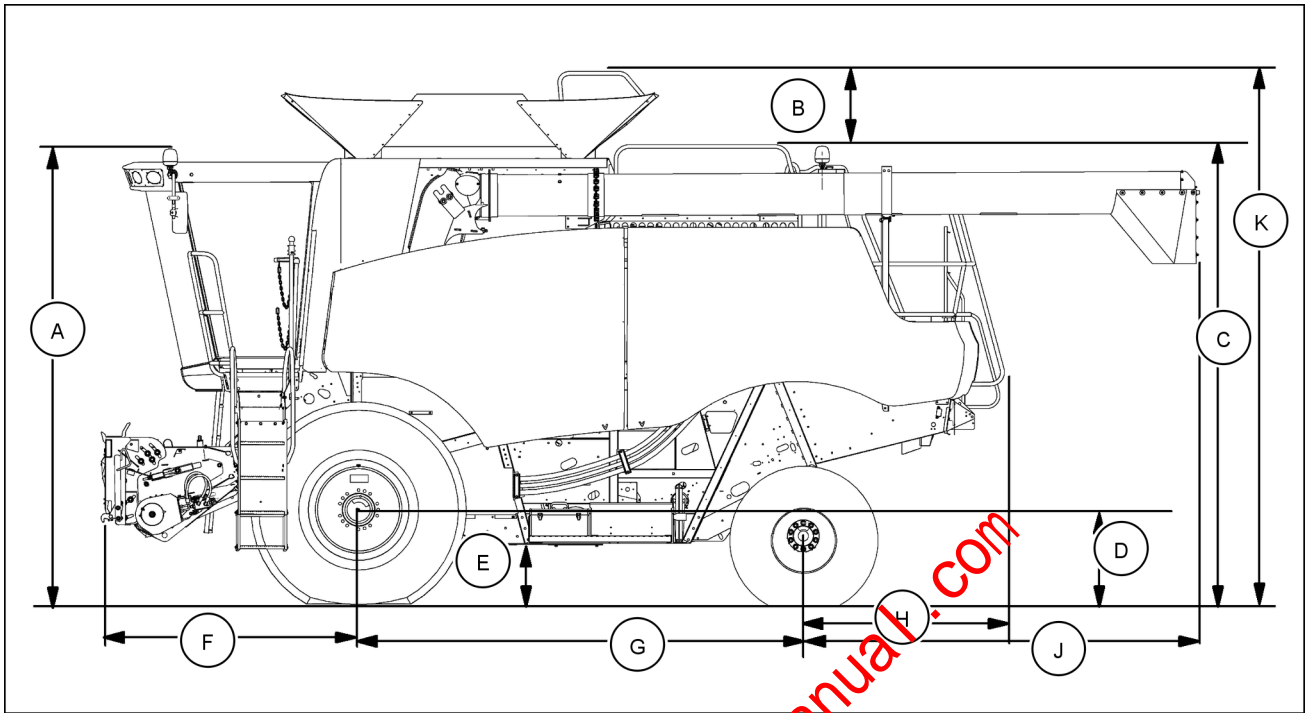

RH08F009 B 1

(A) Refer to chart on the next page	(E) Refer to chart on the next page
(B) 1.092 m (43 in)	(F) With rock trap- 2.311 m (91 in) Without rock trap- 2.192 m (86.3 in)
(C) Refer to chart on the next page	(G) Wheelbase - 3.815 m (150.2 in)
(D) Refer to chart on the next page	(H) 1.682 m (66.2 in)

**NOTE:** These dimensions are with the feeder raised.

<https://caseinsert.com/manual.com>